

- In the remote control connection state, if the remote control continues for 5 minutes without any operation, the remote control will automatically turn off and the remote control indicator light will turn off.

Joystick remote control

- Joystick remote control allows you to remotely control the movement of the vehicle through the joystick on the body of the remote control.

- It is recommended that the remote control be operated within 10 meters of the vehicle's visible range.

Speed Gear Adjustment

- Click the "+" button to increase the vehicle speed gear by 1 gear.
- Click the "-" button to reduce the vehicle speed gear by 1 gear.

Anti-theft lock function


- When the vehicle is in anti-theft unlocked state, click the anti-theft lock button of the Bluetooth remote control, then the vehicle is anti-theft locked; when the vehicle is in anti-theft locked state, click the anti-theft lock button of the Bluetooth remote control, then the vehicle is anti-theft unlocked.

indicator light

| Indicator status                        | Status description                                                         |
|-----------------------------------------|----------------------------------------------------------------------------|
| Red color is always on                  | Power on and not connected, the remote control is connecting automatically |
| Green on                                | Power on and connected                                                     |
| Red light blinking                      | auto pairing mode                                                          |
| Red and green blink alternately 2 times | Power on when the remote control lever is not in zero position             |
| Off                                     | Shutdown                                                                   |

V. Troubleshooting

| fault phenomenon                                                           | Reason for failure                                                                                 | method settle an issue                                                                                                                                                                                                      |
|----------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| unable boot up (computer)                                                  | Battery depletion                                                                                  | Replacement of new batteries                                                                                                                                                                                                |
| Unable to connect successfully                                             | The remote control is too far away from the vehicle or is obscured                                 | It is recommended to operate within 10 meters of the vehicle's visual range                                                                                                                                                 |
|                                                                            | Low battery                                                                                        | Replacement of new batteries                                                                                                                                                                                                |
| automatic shutdown                                                         | Battery depletion                                                                                  | Replacement of new batteries                                                                                                                                                                                                |
| Automatic disconnection                                                    | The remote control is too far away from the vehicle or is obscured                                 | It is recommended to operate within 10 meters of the vehicle's visual range                                                                                                                                                 |
|                                                                            | Battery depletion                                                                                  | Replacement with a new battery                                                                                                                                                                                              |
| Indicator light flashes red and green alternately 2 times and extinguished | The remote control rocker is not in the center zero position when the remote control is turned on. | Return the remote control rocker to the center zero position and then turn on the remote control.<br>(The joystick will automatically return to the center zero position when no external force is applied to the joystick) |
| Remote control is not working properly                                     | Low battery                                                                                        | Replacement of new batteries                                                                                                                                                                                                |
| Button Function Failure                                                    | Low battery                                                                                        | Replacement of new batteries                                                                                                                                                                                                |

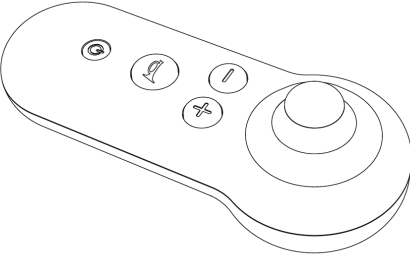

Bluetooth  
remote control

Instructions for use

## I. Package Contents


1. Bluetooth Remote Control X1
2. Instruction manual X1
3. AAA dry cell batteries (2 cells) X1

## II. Product Profile

The BBR-BLERC series Bluetooth remote control (hereinafter referred to as the "remote control") supports the remote control of the BBR-BLERC series.

The program connects and remotely controls ROBOOTER's vehicles.

| Product name  | Bang Bang Standard Remote Control | Anti-theft lock remote control |
|---------------|-----------------------------------|--------------------------------|
| Product Model | BBR-BLERC01                       | BBR-BLERC02                    |

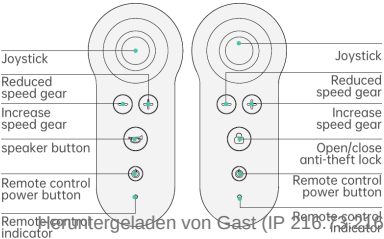

## III. Precautions

Please read this manual carefully and familiarize yourself with the functions and operation of this product before using it. This product should not be used by persons with physical, sensory, intellectual or emotional disabilities or by persons (including children) without relevant experience and knowledge. Children are prohibited from operating this product or using it as a toy.

### 1. Requirements for safe use

- Do not use the product in an environment with poor communication signals or strong electromagnetic interference. Use of the product near sources of strong electromagnetic interference may affect the operation of the product. Sources of electromagnetic interference include, but are not limited to: Wi-Fi hotspots, routers, Bluetooth devices, high voltage power lines, high voltage power transmission stations, cellular phone base stations, and TV broadcasting towers.
- It is prohibited to disassemble, modify, or add parts to this product.
- It is prohibited to use this product to control the vehicle to ram at buildings, people or animals, or to use this product to control the vehicle to carry, tow, or launch any dangerous objects.

It is prohibited to put the product into a fire or heater, use

## IV. Instructions for use

or place the product near a heat source (such as inside a car in direct sunlight or hot weather, next to a fire source or heater), or it may cause the battery to overheat, catch fire, malfunction or have a shortened lifespan.

- It is prohibited to immerse the product in water, or to use a strong stream of water or a high-pressure hose to clean the body.
- It is prohibited for children to operate this product or use it as a toy.
- Use of this product by persons with physical, sensory, intellectual or emotional disabilities and persons without relevant experience and knowledge (including children) is prohibited.
- The components of this product contain small parts, please do not allow children to operate or disassemble this product to avoid accidental swallowing of parts by children.
- When the remote control is not operated for 1 minute, it will switch off automatically.

### Attention

- If the battery leaks and the electrolyte gets into your eyes, do not rub, but immediately flush your eyes with water and send them to a doctor for treatment.
- The use of this product remote control vehicles should have enough safety awareness, always pay attention to the vehicle around the vehicles and pedestrians,

- need to be ready to deal with the following situations: 1. someone suddenly approaching; 2. around the children or pets are playing; 3. potholes, sewer bulkheads, railroad tracks, expansion joints, pavement construction, and the surrounding obstacles and so on. These can lead to accidents.
- When using this product remote control vehicle please always pay attention to maintain a safe speed to avoid accidents.
- Because building walls, rocks, and woods may interfere with sensors and communication signals, it is recommended to operate the remote control within 10 meters of the vehicle's visible range.
- Before using this product, you should make sure that you have learned enough about this product, and please do not allow anyone who is not familiar with its use to use it.

### 2. Maintenance requirements

When this product is not in use, it should be placed in a cool and dry place, do not place it in direct sunlight or humid environment, if the product is unused for a long period of time, the battery should also be removed.


### 3. Legal and regulatory requirements

It is the responsibility of the user to be aware of the laws and regulations in his/her region and to comply with them. If the laws and regulations in your region stipulate the use of electronic products such as remote controls, please use this product in accordance with the corresponding regulations.

## IV. Instructions for use

### 1. Battery description

This product uses 2 AAA type dry batteries (size 7) as power supply. Please install the batteries correctly and make sure that the positive and negative terminals are correctly oriented. Do not throw the battery into fire or disassemble it to avoid explosion or leakage. Please recycle used batteries in accordance with the laws and regulations of your region.

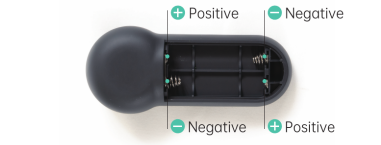

### 2. Functions and settings

This product Bluetooth remote control mainly has rocker remote control function, speed gear adjustment function, anti-theft lock function and folding and unfolding control function.

### Remote control power-up and pairing

- Long press the power button of the remote control for 1 second to turn on the power, the first time you turn on the power, by default, it enters the auto-pairing mode, the remote control indicator light flashes red in this mode.
- Please make sure the vehicle is turned on during the

- auto-pairing process, and it is recommended to wait patiently for the auto-pairing to complete with no line of sight between the remote control and the vehicle and as close as possible.
- If auto pairing is successful, the remote control indicator turns green and is always on.
- If the pairing is still not successful after more than 30 seconds, the remote control will turn off automatically and the remote control indicator light will turn off. The next time the remote control is turned on, it will still enter the auto pairing mode.

### Remote Control Connection

- After the first successful pairing between the remote control and the vehicle, subsequent remote control switches will try to connect to the paired vehicle automatically, the remote control indicator light is always red during the connection process, and the remote control indicator light is always green after successful connection.
- If the connection is still not successful after more than 60 seconds, the remote control will automatically turn off and the remote control indicator light will turn off. The next time the remote control is turned on it will still try to connect to the paired vehicle automatically.
- remote control to turn off the machine**
  - Long press the power button of the remote control for 3 seconds to turn off the power, the indicator light of the remote control is off.